


Supplemental Step (if necessary) #1 – Lowering Motor

Loosen the 4x nuts on the inside of the motorbox. Then shift the blower(s) on mounting plate to allow them to detach (keyhole). Motorbox does not need to be mounted to liner to remove the motor.

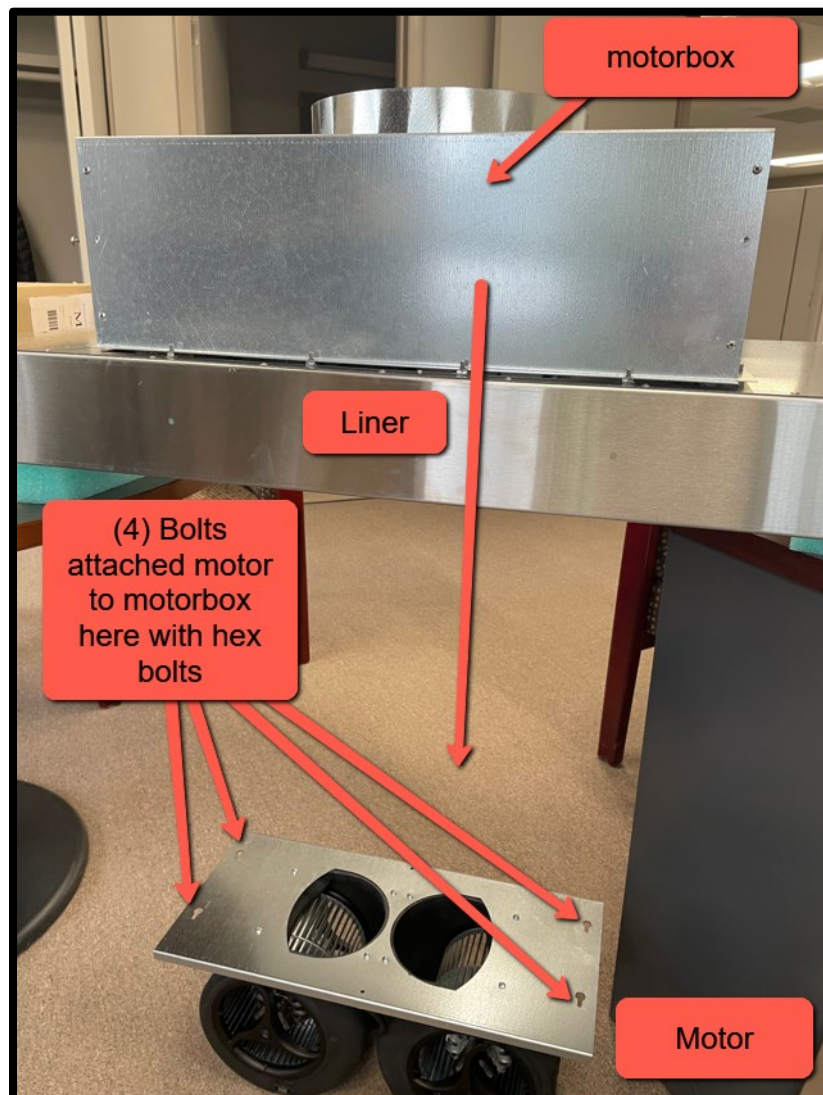

Supplemental Step #2 - Internal Duct Connection

This step should be completed by a licensed HVAC professional. Once motor is removed, you can now reach up and make the internal duct connection. Seal the connection between the duct collar and ducting using water resistant HVAC approved metal foil tape. Then reinstall motor in motorbox (reverse procedure of previous step).

